


## Bracket Installation

Mount end Installation Brackets 3" from each side. Space any remaining brackets evenly.

- Shades up to 40" wide require 2 brackets
- Shades 40" to 72" wide require 3 brackets
- Shades over 72" wide require 4 brackets


Make sure that all brackets are aligned and level. For the best fit on a non-perfect half circle, in a deeply recessed window opening, position the brackets so that the arch is installed close to the original depth that the template was made.

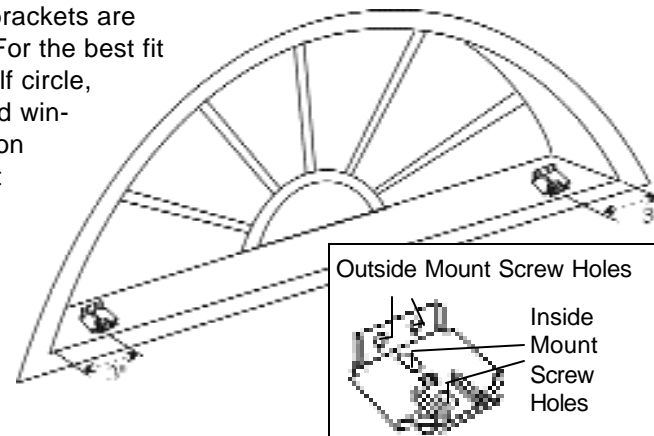

## Bracket Installation for Sidemount

Line bracket top with joint where archtop meets top of rectangular window.


Mark holes for screws. Brackets must be level. Remove brackets and drill holes. Insert Bugle Head Screws for keyhole slots only. Approximately 1/8" of the screw should be left protruding.

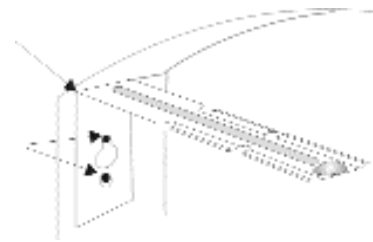


## INSTALLATION OF FABRIC TO RAIL

Use care when sliding fabric into the rail so that you don't tear the fabric on the corners of the rail.

- Remove the endcaps from the rail.
- Slide the fabric stack into the middle of the bottom rail.
- Fan the fabric out and slide the free stiffened cell of the fabric into the rail. Note that on arches which are not perfect half circles, one end of the fabric stack has a straight edge and the other end has a trimmed (jagged) edge. Orient the fabric correctly so that the trimmed (jagged) edge, when fanned out, will become the outside edge of the arch. The straight side of the fabric stack will form the inner circle of the arch.

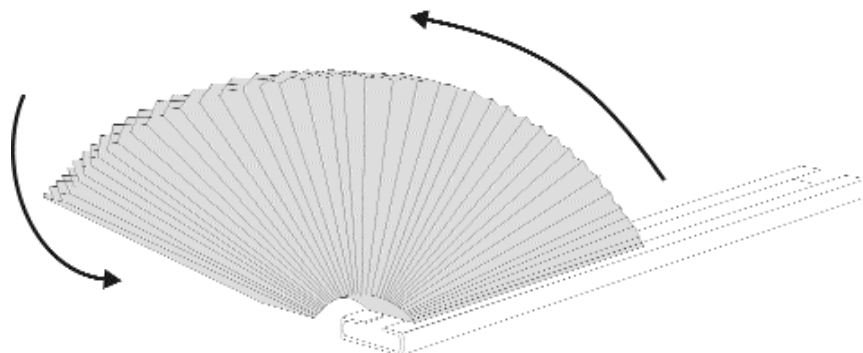


- Slide the stiffened cells into the rail so that the ends of the fabric match up with the ends of the bottom rail.
- Inside the center of the rail, mark where the stiffened fabric ends.
- For perfect half circles only, cut the plastic stiffener provided to fit the pivot opening. Peel the paper liner off the stiffener and adhere it to the bottom rail in the inner circle of the arch.
- Replace the endcaps. The four circular dimples on the endcaps should face down.

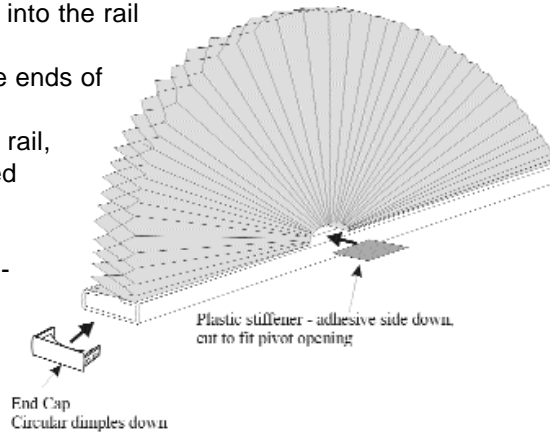


## ROSETTE ASSEMBLY AND INSTALLATION

The Rosette is sent in a closed stack.

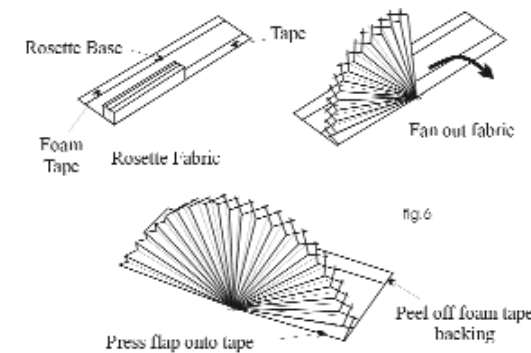

- Peel of the paper liner from the tape on the front of the rosette base.
- Fan out the fabric and press the fabric onto the tape.


- Peel the paper liner from the foam tape on the back top of the rosette base and attach the rosette to the bottom of the rail.
- The rosette should be centered on the rail.

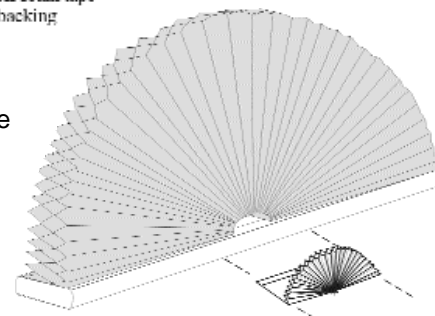

## INSTALLATION OF ARCH SUPPORT CLIPS

The number of arch supports needed and their position are determined by the size and shape of the arch. Perfect half circles will require less support than an eyebrow shaped arch.


- Mark the locations for the support clips. Position the clips so that the the back of the clips are at the same depth as the back of the installation bracket.
- Place a mark at the top center of the window opening. Space remaining clips evenly apart.
- Make sure that all marks are at a consistent depth within the sill.
- Screw the arch support clips to the mounting surface through the hole in the top of the clip (inside mounts) or through the slot in the back (outside mounts).

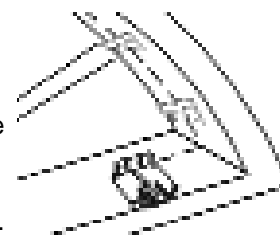

## INSTALLATION OF THE RAIL INTO THE BRACKETS


### STANDARD MOUNTING BRACKET

- Catch the front groove of the rail with the front groove of the bracket.
- Center the rail in the window opening.
- Push the rail back and down to catch the back of the rail in the bracket (a). Then release (b).

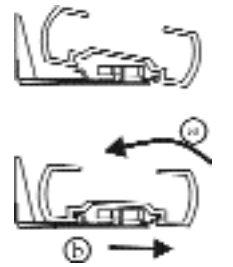


### SIDEMOUNT BRACKET

- Partially remove the cordlock from the rectangular shade.
- Slide the bracket onto the rail.
- Replace the cordlock.

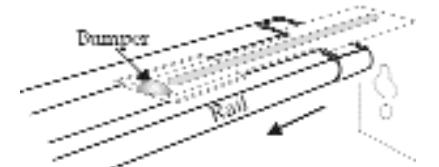


- If blind is over 48" slide a modified bracket onto the center of the rail.
- Remove both endcaps from the archtop shade.
- Slide the archtop rail onto the brackets on the headrail of the rectangular shade. (Center bracket must not move off center.)
- Remove the endcap from the opposite end of the rectangular shade headrail. Slide remaining sidemount bracket into both rectangular and archtop rails.
- Replace the endcap on the rectangular shade before sliding bracket all the way into place.
- Replace the endcaps on the archtop shade.
- Hook one Bracket onto the screw in the window frame using the keyhole slot.
- Bring the other end Bracket over the screw at the other side of the frame. Slide down, flexing the Bracket inward, until screw engages in the keyhole slot.
- Make sure both Brackets are slipped down all the way in the keyhole slots. Remove rubber bands and install a screw in the bottom hole of each Bracket.
- Tighten all screws. Lower the rectangular shade.

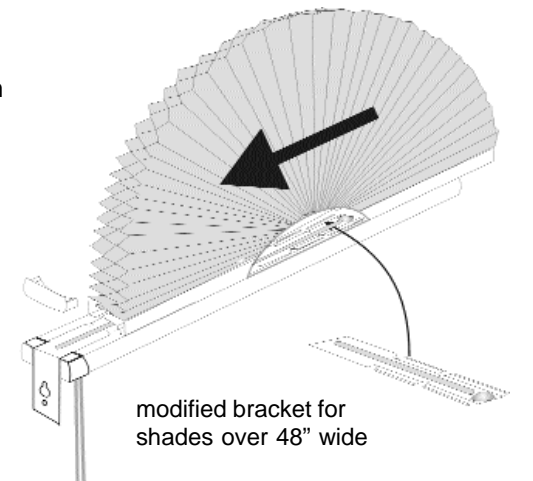

PLACE FABRIC INTO CLIPS




- ♦ Find the center of the fabric.
- ♦ Gently press on the fabric until you are able to get the back cell into the top center support clip.
- ♦ Next, go to the first clip up from the bottom of the arch, gently lift and fan out the fabric until the first section fits the window opening. Gently press on the fabric until you are able to get the back cell into the support clip.
- ♦ Repeat for the remaining clips.
- ♦ Check the fit of the arch shade. Reposition the fabric in the clips if necessary.

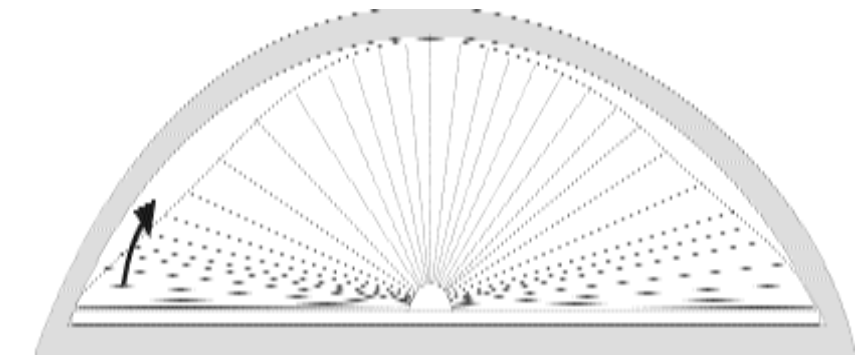

STATIONARY QUARTER ROUND  
BRACKET INSTALLATION

Mount the brackets to the vertical and horizontal mounting surfaces.

- ♦ Make sure that brackets are mounted at a consistent depth within the sill and that they are aligned.
- ♦ Place one bracket approximately 3" from the bottom and another bracket 3" from the top along the vertical mounting surface.
- ♦ Place a bracket approximately 3" in from both edges of the horizontal mounting surface.

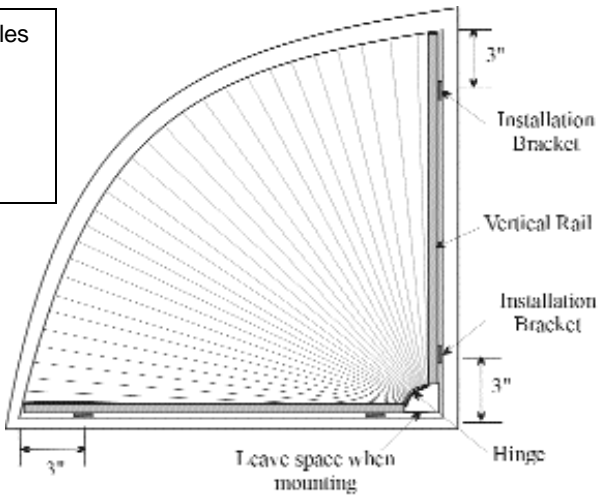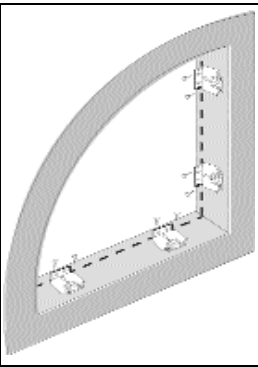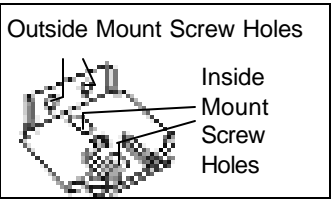


STATIONARY QUARTER ROUND

RAIL INSTALLATION



Mount the vertical and horizontal shade rails into the brackets.

- ♦ Catch the front groove of the rail with the spring loaded tip of the bracket.
- ♦ Position the rail in the window opening. Make sure to leave a space at the pivot as shown on the previous page.
- ♦ Push the rail toward the window, compressing the tip, to catch the back of the rail in the bracket (a). Then release (b).

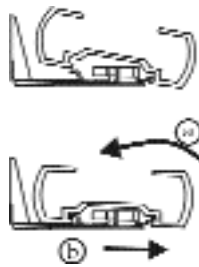



INSTALLATION OF ARCH SUPPORT CLIPS

- ♦ Check the fit of the arch.
- ♦ Mark the positions of the support clips if necessary.
- ♦ Remove arch.
- ♦ Mount clips at a consistent depth within the sill.
- ♦ Reinstall the arch.
- ♦ Gently press on fabric until you can get the back cell into the support clip.

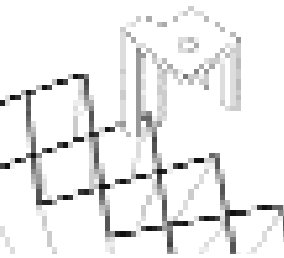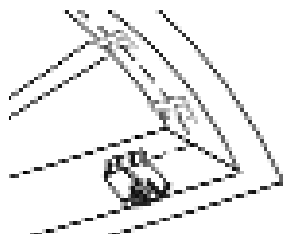

Stationary Fan Style  
Archtop Shades

INSTALLATION INSTRUCTIONS

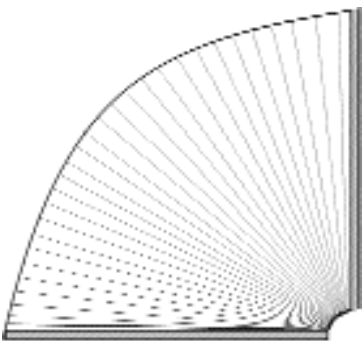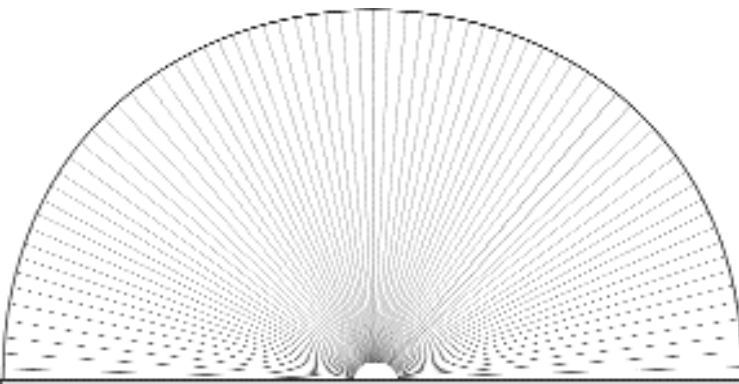

CLEANING AND CARE

The Shade fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the Shade can be removed from the mounting brackets and soaked in warm water. When damp, raise Shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call your dealer for advice.